



Heavy Duty Power Equipment

2-Way Feed Chipper / Shredder Owner's Manual

This manual contains important safety instructions for Chipper/Shredders
READ SAFETY WARNINGS AND OPERATING INSTRUCTIONS CAREFULLY, SAVE THESE INSTRUCTIONS.

Contents:

- Warnings & Specifications
- Component Identification
- Missing Parts Order Form
- Assembly
- Important Engine Information
- Operating Instructions
- Maintenance & Storage
- Troubleshooting
- Warranty & Service



DO NOT RETURN THIS CHIPPER SHREDDER TO THE STORE!

HAVE QUESTIONS OR NEED HELP?
 call 24 hrs / 7-days a week help-line: [1] 919-550-3221
 or go to www.gxioutdoorpower.com
www.parts3221.com
www.help3221.com

Have the following information ready when you call us:

Date of Purchase: _____
 Location of Purchase: _____
 Serial #: _____
 Model #: _____

DEK® is registered trademark of GXi Outdoor Power LLC Clayton, NC 27520 USA
 No part of this publication can be printed or copied without written permission.

This owner's manual is considered a permanent part of the chipper shredder and should remain with the chipper shredder if resold. The information and specifications included in this publication were in effect at the time of approval for printing.

GXi Outdoor Power LLC, exclusive marketer of DEK Heavy Duty Power Equipment, reserves the right to discontinue or change specifications or design at any time without notice and without incurring any obligation what so ever. No part of this publication may be reproduced without written permission.

WARNINGS

 **WARNING**

WARNING: This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury. When you see this symbol - heed its warning.

 **WARNING**

WARNING: The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

DANGER: This machine was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

Training

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage them quickly.
3. Never allow children under 16 years old to operate this machine. Children 16 years old and over should read and understand the operation instructions and safety rules in this manual and should be trained and supervised by a parent.
4. Never allow adults to operate this machine without proper instruction.
5. Keep bystanders, helpers, pets, and children at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.
6. Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.
7. Do not put hands and feet near rotating parts or in the feeding chambers and discharge opening. Contact with the rotating impeller can amputate fingers, hands, and feet.

8. Never attempt to unclog either the feed intake or discharge opening, remove or empty bag, or inspect and repair the machine while the engine is running. Shut the engine off and wait until all moving parts have come to a complete stop. Disconnect the spark plug wire and ground it against the engine.

 **WARNING**

WARNING: Do not operate this machine unless the chute deflector has been installed properly.

 **WARNING**

WARNING: Rotating cutting blades. Keep hands and feet out of opening while machine is running.

 **WARNING**

WARNING: Do not deposit branches larger than 4 inch diameter in the chute. Do not deposit branches larger than 1/4 inches into the funnel.

DO NOT force the branches into this machine, allow the machine to automatically feed through.

 **WARNING**

WARNING: Safety glasses should be worn while operating this machine or if you are standing within 75 ft. of the machine.

 **WARNING**

WARNING: Keep bystanders, helpers, pets, and children at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.

Never wear loose clothes or long jewelry and keep your long hair under a headgear when operating machine.

Never use machine on a slope or hard smooth floor.

Attaching the Chip Collection Bag

- To attach the bag, place the opening of the bag completely over the discharge chute and hook the metal grommets on two wire hooks located near the base of the engine.
- Tighten the draw string securely.

Recoil Starter

The starter handle is located on the engine. Pull the starter handle to start engine.

Chipper Chute

Allow twigs and small branches up to 4" in diameter to be fed into the impeller for chipping. See Figure 6.

Chipper Funnel

Allow leaves and small branches up to 1/4" diameter to be fed into the funnel for chipping and shredding.

Chipper Bag (shown in hardware bag below)

Collects shredded or chipped material fed through the chipper chute or hopper assembly.

Lawn Tractor or ATV Hitch

To be used for towing by lawn tractors or ATVs at speeds below 15 mph.


Discharge Chute

Chipped materials are discharged through this opening. It may be left open or the chip collection bag (Chipper Bag) can be attached to the chute.

Fuel Tank

Fill tank with regular unleaded fuel. Always leave about 1" of air gap at the top of the tank for fuel expansion to prevent seepage or spills.

Figure 6

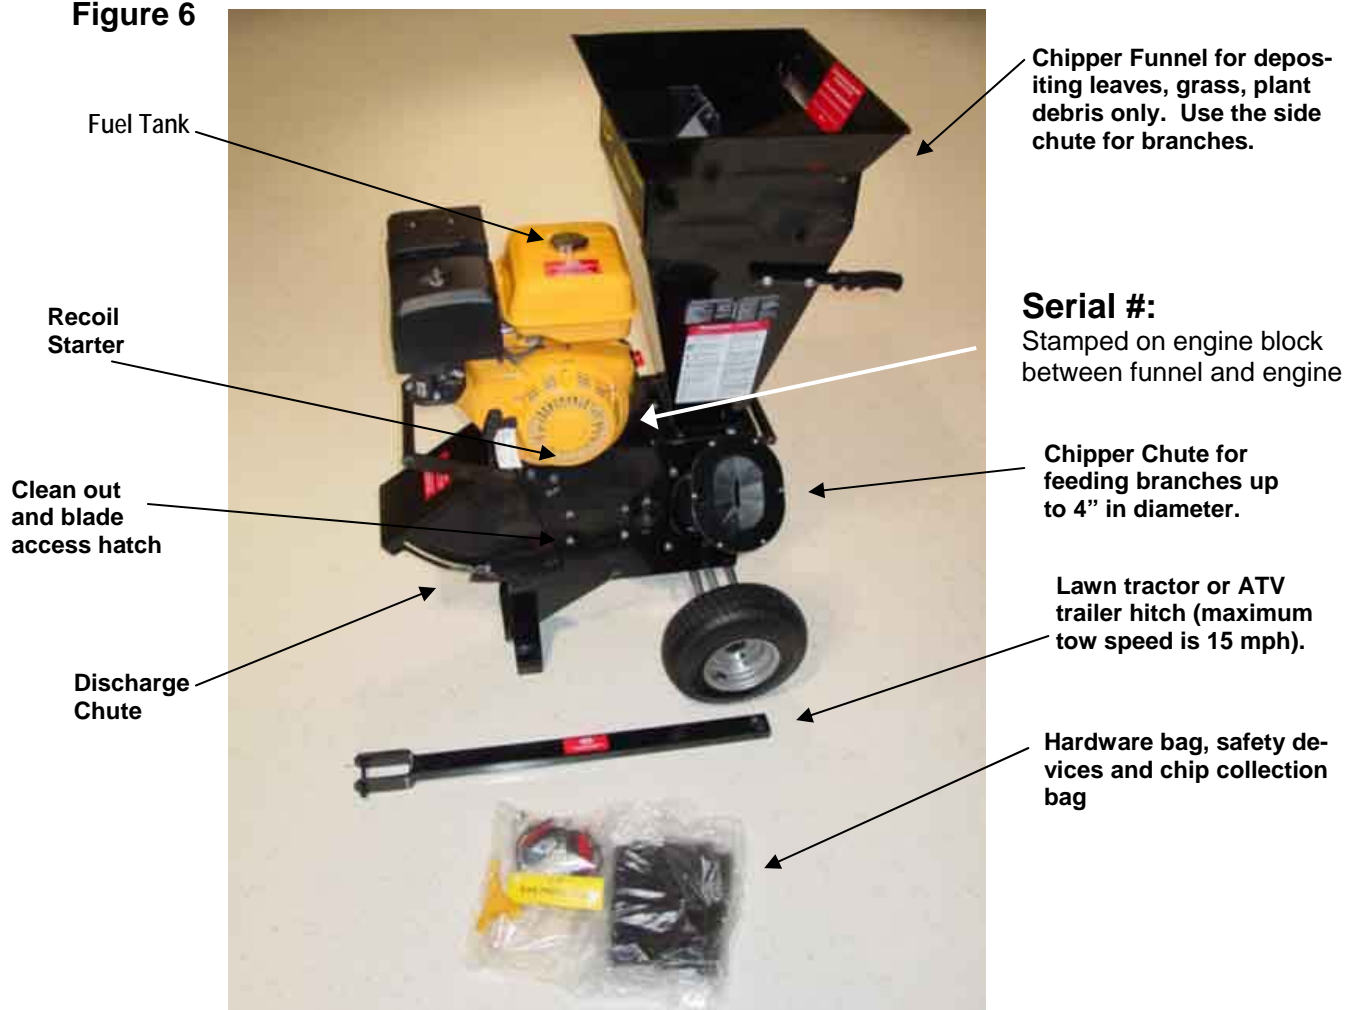

Missing Parts Request Form

Please indicate the part that you are missing:

- Hardware bag
- Wheel Kit
- Other _____

Date of purchase _____

Model #:

- CH1

Name

Address

Phone

Email

Serial #: _____

Comments:

IMPORTANT: Please include your receipt. Without a receipt, your order will be delayed. You may also email us at:

customerservice@gxioutdoorpower.com. If emailing, please scan in your proof of purchase.

www.serviceandwarrantyonline.com

Other fine products offered by **DEK** Heavy Duty Power Equipment



Commercial Lawn Mowers



Heavy Duty Pressure Washers



Rental Grade Generators



Generator Accessories

Your Responsibility

Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine. Not all safety labels shown may apply to your chipper shredder.

Preparation

1. Thoroughly inspect the area where the equipment is to be used. Remove all rocks, bottles, cans, or other foreign objects which could be picked up or thrown and cause personal injury or damage to the machine.
2. Always wear safety glasses or safety goggles during operation or while performing an adjustment or repair, to protect eyes. Thrown objects which ricochet can cause serious injury to the eyes.
3. Wear sturdy, rough-soled work shoes and closefitting slacks and shirts. Loose fitting clothes or Jewelry can be caught in movable parts. Never operate this machine in bare feet or sandals. Wear leather work gloves when feeding material in the chipper chute.
4. Before starting, check all bolts and screws for proper tightness to be sure the machine is in safe working condition. Also, visually inspect machine for any damage at frequent intervals.
5. Maintain or replace safety and instructions labels, as necessary.
6. To avoid personal injury or property damage use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Serious personal injury can occur when gasoline is spilled on yourself or your clothes which can ignite. Wash your skin and change clothes immediately.
 - a. Use only an approved gasoline container.
 - b. Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
 - c. Never fuel machine indoors.
 - d. Never remove gas cap or add fuel while the engine is hot or running.
 - e. Allow engine to cool at least two minutes before refueling.
 - f. Never over fill fuel tank. Fill tank to no more than 1/2 inch below bottom of filler neck to provide space for fuel expansion.
 - g. Replace gasoline cap and tighten securely.
 - h. If gasoline is spilled, wipe it off the engine and equipment. Move machine to another area. Wait 5 minutes before starting the engine.
 - i. Never store the machine or fuel container inside where there is an open flame, spark, or pilot light (e.g. furnace, water heater, space heater, clothes dryer, etc.).
 - j. To reduce a fire hazard, keep machine free of grass, leaves, or other debris build-up. Clean up oil or fuel spillage and remove any fuel soaked debris.
 - k. Allow machine to cool at least 5 minutes before storing.

READ THESE OPERATING GUIDELINES BEFORE YOU PROCEED ANY FURTHER**Operation**

1. Do not put hands and feet near rotating parts or in the feeding chambers and discharge opening. Contact with the rotating impeller can amputate fingers, hands, and feet.
2. Before starting the machine, make sure the chipper chute, feed intake, and cutting chamber are empty and free of all debris.
3. Thoroughly inspect all material to be shredded and remove any metal, rocks, bottles, cans, or other foreign objects which could cause personal injury or damage to the machine.
4. If it becomes necessary to push material through the shredder hopper, use a small diameter stick. Do not use your hands or feet.
5. If the impeller strikes a foreign object or if your machine should start making an unusual noise or vibration, immediately shut the engine off. Allow the impeller to come to a complete stop. Disconnect the spark plug wire, ground it against the engine and perform the following steps:
 - a. Inspect for damage.
 - b. Repair or replace any damaged parts.
 - c. Check for any loose parts and tighten to assure continued safe operation.
6. Do not allow an accumulation of processed material to build up in the discharge area. This can prevent proper discharge and result in kickback of material through the feed opening.
7. Do not attempt to shred or chip material larger than specified on the machine or in this manual. Personal injury or machine damage could result.
8. Never attempt to unclog either the feed intake or discharge opening while the engine is running. Shut the engine off, wait until all moving parts have stopped, disconnect the spark plug wire and ground it against the engine before clearing debris.
9. Never operate without the shredder funnel, chipper chute, or discharge chute properly attached to the machine. Never empty or change discharge bag while the engine is running.
10. Keep all guards, deflectors and safety devices in place and operating properly.
11. Keep your face and body back and to the side of the chipper chute while feeding material into the machine to avoid accidental kickback injuries.
12. Never operate this machine without good visibility or light.
13. Do not operate this machine on a paved, gravel or non-level surface.
14. Do not operate this machine while under the influence of alcohol or drugs.
15. Muffler and engine become hot and can cause a burn. Do not touch.
16. Never pick up or carry machine while the engine is running.

IMPORTANT: This unit is shipped without gasoline or oil in the engine. Be certain to fill the engine with gasoline and oil as instructed before operating your machine.

Required tools: A Philips head screw driver

Approximate assembly time: 10 minutes

1. Remove the chipper from its carton

Remove staples, break glue on top flaps, or cut tape at carton end and peel along top flap to open carton.

Figure 1



2. Verify all parts in the chipper carton (See Figure 1)

- Chipper Funnel
- Chipper engine and box assembly (pre-assembled)
- Chipper Chute
- Hardware Bag
- Trailer hitch and funnel handles packaged together

Figure 2



3. Verify all parts in the hardware bag (See Figure 2)

- Hearing protection
- Gloves
- Goggles (eye protection)
- Oil fill funnel
- Chip collection bag
- Wrench for assembly of the chute and funnel
- Hardware bag with a spare blade

4. Disconnect The Spark Plug Wire

Before setting up your chipper shredder, disconnect the spark plug wire from the spark plug and ground against the engine to prevent inadvertent starting of the machine. This step should be taken as a precaution whenever you are working on this machine.

5. Attaching the chipper funnel

- The first step is to attach the 2 handles to the sides of the funnel using the wrench provided and a Phillips head screw driver (Figure 3). Tighten the nuts securely.
- The second step is to place the funnel over the opening on the chipper box, ensuring the rubber gasket is correctly aligned. Secure the funnel using the two “swing up bolts” and the one fixed bolt using the wrench provided. Tighten the nuts securely (Figure 4).

Figure 3




Figure 4



5. Attaching the Side Chipper Chute

- Place the chipper chute over the four bolts protruding from the side of the chipper box and secure the nuts tightly using the wrench provided (Figure 5).

Figure 5

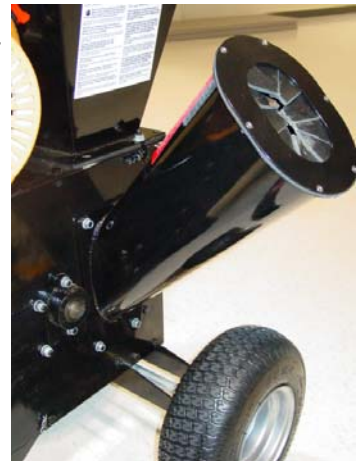

6. Attaching the chip collection bag

- Place the metal grommets of the bag over the wire loops located at the base of the engine. Wrap the bag under the bottom of the discharge chute and pull the draw string tightly and secure it.

7. Attaching the trailer hitch

- Place the trailer hitch into the socket at the base of the chipper over the axle assembly. Insert the pin and secure with the locking cotter pin.

8. Re-connect the spark plug wire

This owner's manual is considered a permanent part of the power equipment and should remain with the equipment if re-sold. The information and specifications included in this publication were in effect at the time of approval for printing.

GXi Outdoor Power LLC, exclusive marketer of DEK Heavy Duty Power Equipment, reserves the right to discontinue or change specifications or design at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.

EMISSION CONTROL SYSTEM INFORMATION

The U.S. and California Clean Air Acts

EPA and California regulations require all manufacturers to furnish written instructions describing the operation and maintenance of emission control systems. The following instructions and procedures must be followed in order to keep the emissions from your DEK engine within the emission standards. Maintenance, replacement, or repair of the emission control devices and systems may be performed by any engine repair establishment or individual, using parts that are "certified" to EPA standards.

SAFETY LABEL LOCATIONS

These labels warn you of potential hazards that can cause serious injury. Read them carefully. If a label comes off or becomes hard to read, contact your DEK dealer for a replacement.

SAFETY INFORMATION

DEK products are designed to give safe and dependable service if operated according to instructions. Read and understand this owner's manual before operating your power equipment.

OPERATOR RESPONSIBILITY

Know how to stop your power equipment quickly in case of emergency. Understand the use of all controls and connections. Be sure that anyone who operates this power equipment receives proper instruction. Do not let children operate the power equipment without parental supervision.



WARNING

CARBON MONOXIDE GAS

Exhaust contains poisonous carbon monoxide, a colorless and odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death. To keep exhaust gas from accumulating, use in an area with adequate ventilation. **DO NOT** use this product in a garage, basement, crawlspace, enclosed shed, or any other area that does not have adequate ventilation. **DO NOT** use this equipment near ventilation ducts or open windows that may allow exhaust gasses to enter your home or business. **ONLY** operate this product outdoors.



WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



WARNING

Fire and Burn Hazards

The exhaust system gets hot enough to ignite some materials.

- Keep the power equipment at least 3 feet (1 meter) away from buildings and other equipment during operation.
- Do not enclose this product in any structure.
- Do not smoke when refueling.
- Keep flammable materials away.
- The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot.
- Let the engine cool before storing.
- Refuel in a well ventilated area with the engine stopped.
- Fuel vapors are extremely flammable and may ignite after the engine has started. Make sure that any spilled fuel has been wiped up before starting the generator.

BEFORE PERFORMING ANY SERVICE

Always disconnect the spark plug wire from the spark plug and ground against the engine to prevent inadvertent starting of the machine. This step should be taken as a precaution whenever you are performing service on this machine.



WARNING

Failure to properly follow maintenance instructions and precautions can cause serious injuries or death. Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Safety Precautions:

Make sure the engine is off before you begin any maintenance or repairs. This will eliminate several potential hazards:

- **Carbon monoxide poisoning from engine exhaust.**
Be sure there is adequate ventilation whenever you operate the engine.
- **Burns from hot parts.**
Let the engine and exhaust system cool before touching.
- **Injury from moving parts.**
Do not run the engine unless instructed to do so.

In the State of California a spark arrestor is required by law. Other states may have similar laws. Federal laws apply on all federal lands. If you equip the muffler with a spark arrestor, it must be maintained in effective working order.

Rapid retraction of the recoil starter cord can pull the starter cord back faster than you can let go. When starting the engine, pull the cord slowly until resistance is felt then pull rapidly to avoid kickback.



WARNING

WARNING: The operation of any chipper shredder can result in foreign objects being thrown into the eyes, which can damage your eyes severely. Always wear the safety glasses provided with this unit or eye shields before chipping or shredding and while performing any adjustments or repairs.

Always use the proper personal safety equipment before starting this machine:

1. Ear protection
2. Gloves
3. Eye protection

Add Gasoline and Oil

Step 1: Add gasoline

Step 2: Add approximately 1.1 quarts of 10W-30 oil (5W-30 is recommended for cold weather climate) until the oil is about to overflow from the oil fill spout. A low oil sensor will prevent the engine from running unless the oil is COMPLETELY FULL.

Ensure both oil fill plugs on the engine are secure after filling.



WARNING

WARNING: Never fill fuel tank indoors with engine running or until the engine has been allowed to cool for at least two minutes after running.

Starting the Engine

Step 3: Attach spark plug wire to spark plug. Make certain the metal cap on the end of the spark plug is fastened securely over the metal tip on the spark plug.

Step 4: Move choke lever on engine to CHOKE position. (A warm engine may not require choking).

Step 5: Turn the fuel valve to the ON position.

Step 6: Grasp starter handle and pull rope out slowly until engine reaches start of compression cycle (rope will pull slightly harder at this point). Pull rope with a rapid, continuous, full arm stroke. Keep a firm grip on starter handle. Let the rope re-wind slowly. Repeat the previous steps until engine fires.

Step 7: When engine starts, move choke control gradually to the RUN position.

NOTE: A noise will be heard when finding the start of the compression cycle. This noise is caused by the flails and fingers, which are part of the shredding mechanism, and it should be expected until the impeller reaches full speed.

Using the Chipper Shredder

Yard waste such as leaves and pine needles can be raked up and placed in the funnel assembly for shredding. **DO NOT PUT BRANCHES INTO THE TOP FUNNEL. BRANCHES SHOULD BE FED INTO THE SIDE CHIPPER CHUTE.**

If using the side chipper chute to chip branches, it is important to let the chipper feed the branches through automatically. **DO NOT attempt to force the branches through. If the branches do not automatically feed through, gently push the branch and then allow the chipper to automatically feed the branch through. Forcing branches into the side chute may wear the belt prematurely.**

After the material has been shredded by the flail blades on the impeller assembly, it will be discharged out of opening or into chip catcher bag.

Do not attempt to shred or chip any material other than vegetation found in a normal yard (i.e. branches, leaves, twigs, etc.) Avoid fibrous plants such as tomato vines until they are thoroughly dried out. Twigs and small branches up to 4" in diameter can be fed into the chipper chute.

IMPORTANT: The flail screen is located inside the housing in the discharge area. If the flail screen becomes clogged, remove and clean as instructed. For best performance, it is also important to keep the chipper blade sharp.



WARNING

- **Do not attempt to use the side chute while using the funnel at the same time.**



WARNING

To Empty the Chip Bag

- Stop the engine.
- Release the drawstring and remove the bag from the discharge chute.
- Empty bag and reattach to the discharge chute opening.

SECTION 5: MAINTAINING YOUR CHIPPER SHREDDER

Maintenance Schedule

Item	Before each use	20hrs or every 3 month	50 hrs or every 3 months	100 hrs or every 6 months	300 hrs or every 1 year
Engine oil (Check)	X				
Engine Oil (Change)		X			
Air Cleaner (Check)	X				
Air Cleaner Wash			X		
Fuel filter Cup (Clean)				X	
Spark Plug (Clean)				X	
Spark Plug (Change)					X
Lubricate release bracket			X		
Lubricate hopper assembly			X		
Check chipper blade		X			
Fuel Tank and Filter (Clean)				X*	



WARNING

WARNING: Always stop engine, disconnect spark plug, and ground against engine before cleaning, lubricating or doing any kind of maintenance on your machine.

Maintenance And Storage

- Never tamper with safety devices. Check their proper operation regularly.
- Check bolts and screws for proper tightness at frequent intervals to keep the machine in safe working condition. Also, visually inspect machine for any damage and repair, if needed.
- Before cleaning, repairing, or inspecting, stop the engine and make certain the impeller and all moving parts have stopped. Disconnect the spark plug wire and ground it against the engine to prevent unintended starting.
- Do not change the engine governor settings or overspeed the engine. The governor controls the maximum safe operating speed of the engine.
- Maintain or replace safety and instruction labels, as necessary.
- Follow this manual for safe loading, unloading, transporting, and storage of this machine.
- Never store the machine or fuel container inside where there is an open flame, spark or pilot light such as a water heater, furnace, clothes dryer, etc.
- Always refer to the operator's manual for proper instructions on off-season storage.
- If the fuel tank has to be drained, do this outdoors.
- Observe proper disposal laws and regulations for gas, oil, etc. to protect the environment.

Storing Your Chipper Shredder

- Clean the equipment thoroughly.
- Wipe equipment with an oiled rag to prevent rust.
- Refer to engine manual for correct engine storage instructions
- Store unit in a clean, dry area. Do not store next to corrosive materials such as fertilizer.

If the Chipper Becomes Clogged:

If the discharge area becomes clogged:

- Stop the engine. Disconnect spark plug wire from spark plug and ground against the engine.
- Remove the large funnel and the clean out access hatch on the side of the box (as necessary).
- Reach in and clear the debris causing the blockage. Reinstall the funnel and the clean out access hatch.
- Connect the spark plug wire and restart.

Note: If the blockage is severe, the flail screen within the discharge chute can be removed as well, providing greater access. To accomplish this, remove the pins and slide the flail screen out of the discharge chute.

To Change or Tighten the Belt:

Note, the belt is designed to be the weakest link in the mechanical linkage between the engine and the blades. This improves the safety and durability of the chipper shredder. Occasionally belt tightening and belt changes will be required.

To change the belt perform the following:

- Stop the engine and make certain the chipper shredder has come to a complete stop. Disconnect the spark plug wire from spark plug and ground against the engine.
- Remove the belt guard.
- To change the belt, pry the belt off a pulley using a screw driver shaft as a wedge as you rotate the pulley. In a similar fashion, a new belt can be placed on the pulleys.
- To tighten the tension on the pulleys, follow the above steps plus:
 - Scribe a mark on the base plate along the edge of the engine.
 - Remove the belt from the pulleys.
 - Remove the handle, discharge chute and screen.
 - Loosen the 4 bolts securing the engine.
 - Slide the engine about 1/8" further back.
 - Tighten the engine mounting bolts securely.
 - Re-install the belt and verify the tension. If the belt is still too loose, move the engine back another 1/8" by repeating the above steps.
 - Reinstall guards, chutes, and screens

Optimizing Chipper Performance – Keep the Blade Sharp!

If you do, the localized heat will cause the steel to lose its tempered edge and the blade will dull more quickly in use). While many customers are comfortable sharpening their own blade, most local service centers will sharpen your blade for a small fee. If you need assistance finding a service center or with blade sharpening, please call the GXi customer service team at 919-550-3221.

During operation, if you notice any of the following symptoms, your chipper blade probably needs to be sharpened:

1. Chipper does not auto-feed
2. Chipper produces “chunks” or “sawdust” instead of “chips”
3. Chipper engine bogs down or labors
4. Smoke issues from the drive belt
5. Chipper jams or stops altogether

For optimal chipping, you will need to sharpen and/or replace your chipper’s blade frequently. Similar to the teeth of a chainsaw, your chipper blade requires frequent sharpening. We recommend that you check the blade for sharpness before each use and after every 2-3 hours of operation.

Some models contain a spare blade in the hardware bag. If you require additional blades, they can be purchased from GXi customer service at 919-550-3221.

As a rough guide, your chipper blade will require sharpening after 4-8 hours of normal use when chipping harder woods such as maple or oak. When chipping softer woods such as poplar and pine, the blade can last 10-20 hours before sharpening is required. If you hit a foreign object such as a stone or nail or if you are processing limbs that have small amounts of sand or soil on them, you will need to sharpen the blade much more frequently.

Operating the chipper with a sharp blade will extend the life of :

1. **The blade** because if a chipper blade becomes too dull, much of the blade itself will have to be removed during the sharpening process. Frequent sharpening maintenance as needed is best. Occasional, intensive sharpening will greatly diminish the life of the chipper blade.
2. **The belt** because as the blade becomes dull, the forces on the belt increase and belt wear is accelerated.
3. **The chipper structure** because if wood is forced into a chipper with a dull blade, the force can bend the feed chute, bend the blade carousel and/or shear the bearing bolts.

To remove and/or replace the blade, please follow the instructions in the owner’s manual.

Since the blade is hardened steel, it should be sharpened on a wet wheel, or by hand on a stone. (Avoid sharpening the blade using a grinder the way you would a lawn mower blade.

SECTION 6: TROUBLESHOOTING

Problem	Cause	Remedy
Engine fails to start	<ol style="list-style-type: none"> 1. Spark plug wire disconnected. 2. Fuel tank empty or stale fuel. 3. Throttle control lever not in correct starting position. (If Equipped) 4. Choke not in CHOKE position. (If equipped) 5. Engine not primed. 6. Blocked fuel line. 7. Faulty spark plug. 	<ol style="list-style-type: none"> 1. Connect wire to spark plug. 2. Fill tank with clean, fresh gasoline. 3. Move throttle lever to FAST position. 4. Move choke to CHOKE position. 5. Prime engine. 6. Clean fuel line. 7. Clean, adjust gap, or replace.
Engine runs erratic	<ol style="list-style-type: none"> 1. Spark plug wire loose. 2. Unit running on CHOKE. (If equipped) 3. Blocked fuel line or stale fuel. 4. Water or dirt in fuel system. 5. Dirty air cleaner. 6. Carburetor out of adjustment. 	<ol style="list-style-type: none"> 1. Connect and tighten spark plug wire. 2. Move choke lever to OFF position. 3. Clean fuel line; fill tank with clean, fresh gasoline. 4. Drain fuel tank. Refill with fresh fuel. 5. Clean or replace air cleaner. 6. See authorized service dealer.
Too much vibration	<ol style="list-style-type: none"> 1. Loose parts or clogged flails. 2. Trying to force branches or logs too fast into the side chute 3. Trying to force branches in the funnel or attempting to put branches into funnel while side chute is in use 	<ol style="list-style-type: none"> 1. See authorized service dealer. 2. Cut off excess limbs off of large branches and ensure blades are sharp 3. Allow the branches to feed through the side chute first before attempting to use the funnel. Also do not put branches in the funnel.
Engine overheats	<ol style="list-style-type: none"> 1. Engine oil level low. 2. Dirty air cleaner. 3. Carburetor not adjusted properly. 	<ol style="list-style-type: none"> 1. Fill crankcase with proper oil. 2. Clean or replace air cleaner. 3. See authorized service dealer.
Occasional skip (hesitates)	<ol style="list-style-type: none"> 1. Spark plug gap too close. 	<ol style="list-style-type: none"> 1. Adjust gap to .030".
Unit does not discharge	<ol style="list-style-type: none"> 1. Discharge chute clogged. 2. Foreign object lodged in impeller. 3. Low engine RPM. 	<ol style="list-style-type: none"> 1. Stop engine immediately and disconnect spark plug wire. Clean flail screen and inside of discharge opening. 2. Stop engine and disconnect spark plug wire. Remove lodged object. 3. Always run engine at full throttle.
Rate of discharge slows	<ol style="list-style-type: none"> 1. Low engine RPM. 2. Chipper blade dull. 	<ol style="list-style-type: none"> 1. Always run engine at full throttle 2. Replace chipper blade or see your authorized service dealer.

NOTE: For repairs beyond the minor adjustments listed above, contact your nearest authorized service dealer.

LENGTH OF WARRANTY: 24 MONTHS PARTS AND 12 MONTH LABOR.

*LENGTH OF WARRANTY: Batteries supplied with applicable products as standard, original equipment are covered by this warranty for a period of 3 months (noncommercial use) or 1 month (commercial/rental use) from the date of original retail product purchase.

Consumable parts such as batteries, oil, spark plugs, blades, belts, air filters, carburetors, gloves, hardware bags are not covered by this warranty.

TO QUALIFY FOR THIS WARRANTY:

The product must be purchased in the United States from a dealer authorized by GXi Outdoor Power LLC to sell those products. This warranty applies to first retail purchaser / owner during the applicable warranty time period. **SAVE YOUR PROOF OF PURCHASE RECEIPT. YOU MUST HAVE A RECEIPT TO OBTAIN WARRANTY SERVICE.**

WHAT DEK POWER EQUIPMENT WILL REPAIR OR REPLACE UNDER WARRANTY:

DEK will repair or replace, at its option, any part that is proven to be **defective in material or workmanship** under normal use during the applicable warranty time period subject to the exclusions stated herein. This warranty is void if the owner fails to follow the prescribed maintenance and operating procedures described in this manual. This specifically refers to ensuring routine oil changes are made, that fuel stabilizer is used for long-term storage, that the generator is not overloaded, and that the generator loads are distributed evenly between the A and B outlets.

DEK has the right to recover warranty administration costs from the owner if the root cause of the malfunction was found to be other than defective material or workmanship. In particular, this warranty does not cover: contaminants in the fuel or oil; damage caused by not following the prescribed warnings and operating practices; failure to follow proper maintenance and storage procedures; and physical damage due to shipping or handling or storage. Damage to the generator that occurs as a result of connecting a DEK generator to household wiring without the use of a UL approved transfer switch device that is connected to the home or business and grounded as per applicable local electrical codes, is not covered by this warranty.

Warranty repairs will be made without charge for parts and labor for the first year. After the first year, this limited warranty covers the costs of replacement parts only.

Anything replaced under warranty becomes the property of DEK. Parts replaced under warranty will be considered as part of the original product and any warranty on those parts will expire coincident with the original product warranty.

TO OBTAIN WARRANTY SERVICE:

You must take the DEK Power Equipment product, accessory, replacement part, apparel or the power equipment on which the accessory or replacement part is installed, and proof of purchase, at your expense, to any DEK Power Equipment service location in the United States, who is authorized to service that product, during the service location's normal business hours. If you are unable to obtain warranty service, or are dissatisfied with the warranty service you receive, take the following steps: First, contact the manager of the service center involved; normally this will resolve the problem. However, if you should require further assistance, write or call the DEK Customer Service.

EXCLUSIONS:

THIS WARRANTY DOES NOT EXTEND TO PARTS AFFECTED OR DAMAGED BY ACCIDENT AND/OR COLLISION, NORMAL WEAR, FUEL CONTAMINATION, USE IN AN APPLICATION FOR WHICH THE PRODUCT WAS NOT DESIGNED OR ANY OTHER MISUSE, NEGLIGENCE, INCORPORATION OR USE OF UNSUITABLE AT-

DISCLAIMER OF CONSEQUENTIAL DAMAGE AND LIMITATION OF IMPLIED WARRANTIES:

DEK DISCLAIMS ANY RESPONSIBILITY FOR LOSS OF TIME OR USE OF THE PRODUCT, TRANSPORTATION, COMMERCIAL LOSS, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGE. ANY IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. This warranty is void if the manufacturing date and the serial number on the equipment has been removed or the equipment has been modified.

EMISSION CONTROL SYSTEM INFORMATION

The U.S. and California Clean Air Acts

EPA and California regulations require all manufacturers to furnish written instructions describing the operation and maintenance of emission control systems. The following instructions and procedures must be followed in order to keep the emissions from your DEK engine within the emission standards. Maintenance, replacement, or repair of the emission control devices and systems may be performed by any engine repair establishment or individual, using parts that are "certified" to EPA standards.

The emission control systems on your DEK engine were designed, built, and certified to conform with EPA regulations. We recommend the use of genuine DEK parts whenever you have maintenance done. These original-design replacement parts are manufactured to the same standards as the original parts, so you can be confident of their performance. The use of replacement parts that are not of the original design and quality may impair the effectiveness of your emission control system. A manufacturer of an aftermarket part assumes the responsibility that the part will not adversely affect emission performance. The manufacturer or re-builder of the part must certify that use of the part will not result in a failure of the engine to comply with emission regulations.

Emission controls are covered by this warranty for all uses for a period of 3 years from original retail purchase date, this coverage extends to subsequent owners of the product with proof of original purchase

For emissions warranty service call 1-800-393-0668 or e-mail customerservice@gxioutdoorpower.com .